


# [521<sub>v1</sub>] Solid Clic replacement

## REMOVAL OF THE DAMAGED PLANK

- Draw the lines on the damaged plank as shown on the illustration opposite (2 identical lines spaced 5 mm apart)
- Cut the plank with a cutter, making several passes along each marked line. To facilitate cutting, it is also possible to use a circular or oscillating saw
- Remove carefully the plank pieces

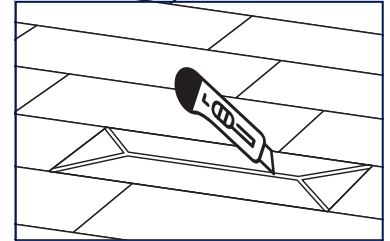

## INSTALLATION OF THE NEW PLANK

- Remove by cutting carefully the two grooves along the long and short edges of the plank to be installed
- Chamfer the back of the plank along the same cut edge, using a cutter or a grooving triangle, so that they remain slightly bevelled
- Cut the corresponding tongue along the long edge of the already installed plank
- Lay down double sided tape on the exposed substrate (e.g. Fix and Free from Gerflor), slightly overlapping beneath the adjacent planks
- Install the new plank and roll (use a non-rebound mallet to interlock the short edge, if necessary)

